

## SPEED 7,5/SPEED 9/ SPEED 10,50/ SPEED 12 SPARE PART LIST



NO	PART NAME		NO	PART NAME	
1	FLOW/ FLOW S FRONT COVER		6	SINGLE PHASE CIRCUT BREAKER	
2	FLOW/ FLOW S FRONT BACK		7	SPST SWITCH	
3	FLOW S HEATING PART		8	DIAPHRAGM GASKET	
4	FLOW S DIFFERENTIAL PRESSURE SWITCH AND LEVEL CHOOSING PART		9	SINGLE PHASE WATER INLET COPPER PIPE	
5	TERMOSTAT		11	SINGLE PHASE WATER INLET/OUTLET JOINT	